



# Oval Basin Bracket


Heavy-Duty Through Wall Cast Iron Basin Bracket Set

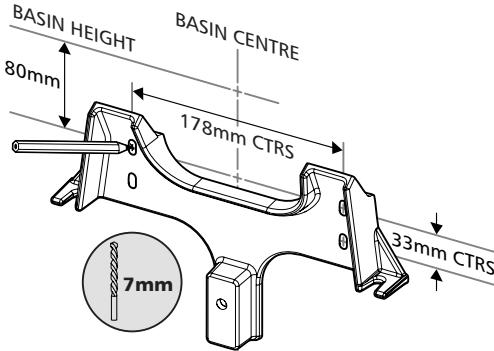


Mark & drill the Ø7mm mounting holes. The top most holes should be marked 80mm below the desired basin height.

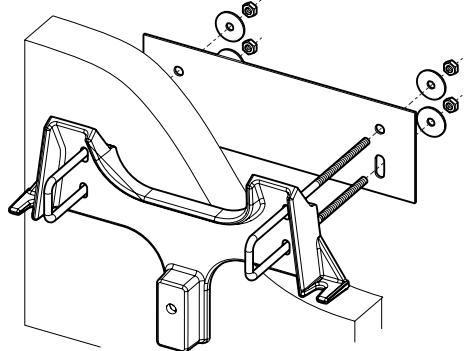


Secure the bracket to the wall using the M6 C-bolts, backplate and M6 penny washers and nuts.

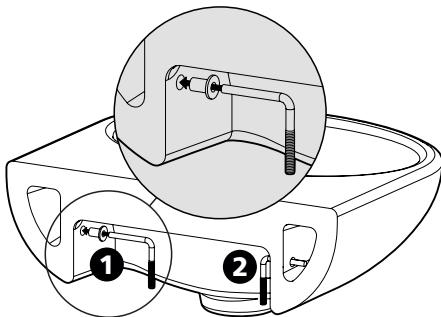


Insert the bushes and then the side anchors into the left and right side holes in the underside of the basin.

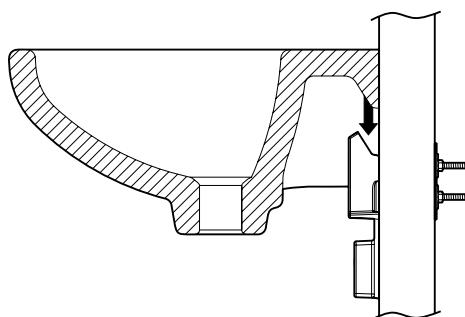

Carefully place the basin onto the bracket ensuring it is fully seated and positioned centrally on the bracket.

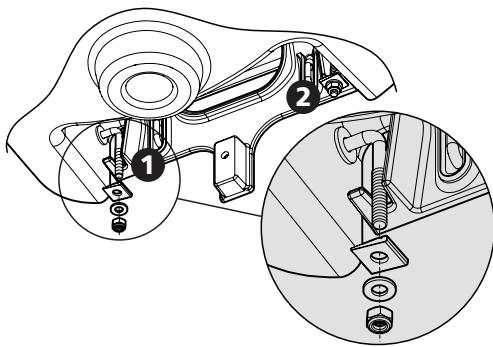

Position the side anchors into the fixing slots and secure using the wedge washer, M8 washer and nyloc nuts.

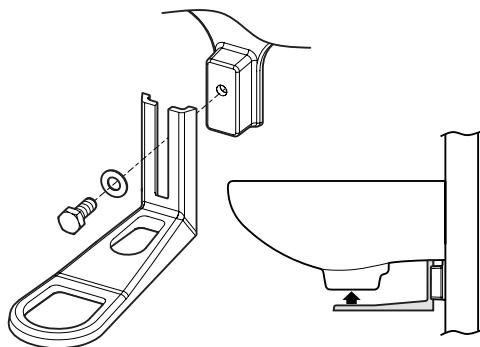

Fit the waste support bracket directly underneath the basin outlet and secure using the brass washer and M10 bolt.